
COMICA
Pro Wireless Audio Solution

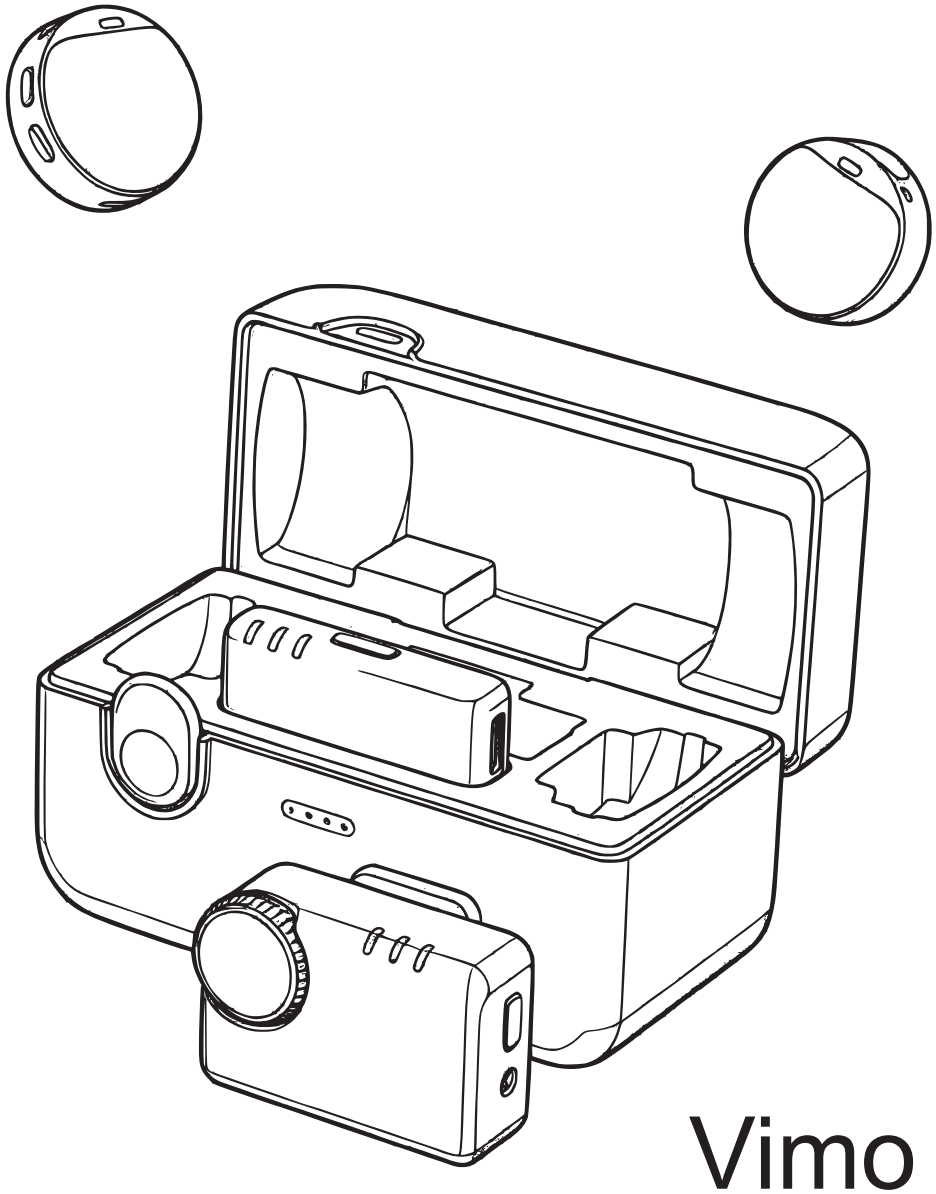

Vimo Me

2.4G Wireless Mini Lavalier Microphone

2.4G无线迷你领夹麦克风

2.4Gワイヤレスミニラベリアマイク

R 220-JP5772

User Manual/使用说明书/取扱説明書

01 English

02 中文

03 日本語

Foreword

Thank you for purchasing the Comica Vimo Me 2.4G Wireless Mini Lavalier Microphone

Main Features

- 2.4G Dual-Channel Wireless Transmission, Strong Anti-Interference
- 48kHz/24Bit High-Fidelity Recording
- CalMix® Noise Reduction for Enhanced Vocal Clarity
- Digital and Analog Dual Output for Wide Device Compatibility
- Stepless Gain Control with Mono/Stereo Switching
- Supports Pass-Through Phone Charging While in Use
- 34h Total Duration with the Multi-function Charging Case
- Up to 300m Stable Transmission Range (Open Area)
- Compact and Portable with Magnetic Attachment

Product Usage Notice

⚠ Please keep face-to-face when using it, and don't turn your back to the receiver; otherwise, it is easy to generate breakpoints, which is a normal phenomenon.

⚠ The transmitter and receiver will automatically turn off for device protection if the disconnection lasts over 30 minutes.

⚠ If the sound pickup distance is close or recording outdoors, please put the wind muff on the transmitter to prevent popping sound or reduce the wind noise.

⚠ Please prevent it from falling, collision and pounding, otherwise it may cause product failure.

⚠ Please do not use the product in a rainy or damp environment, otherwise it may cause short-circuit danger.

Device Storage Notice

⚠ Please do not disassemble the device by yourself to avoid mechanical damage.

⚠ Please do not place the product near or inside the heat sources such as radiators, microwave ovens, refrigerators, air conditioners, etc.


⚠ Please store the product in a dry and cool place, keep it away from the heat, direct sunlight or other corrosive liquids.

Packing List


Vimo Me (Phone) :




Transmitter (TX) *2




USB Type-C Receiver (RX) *1

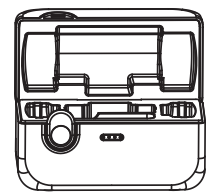

Charging Case *1

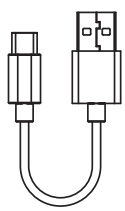


USB-C to USB-A Charging Cable *1

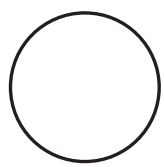


Magnet *2



Magnetic Lanyard *2

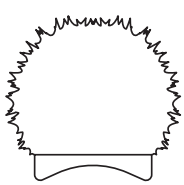

Wind Muff *2

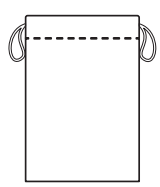

Carrying Bag *1



User Manual *1




Warranty Card *1


Vimo Me (Camera)：




Transmitter (TX) *2

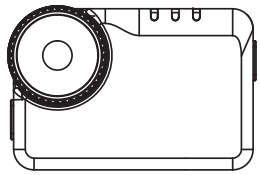


Camera
Receiver (RX) *1

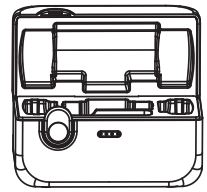


Charging
Case *1

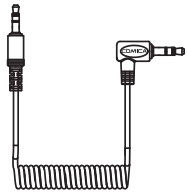

3.5mm TRS to 3.5mm
TRS Audio Cable *1

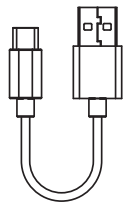


USB-C to USB-A
Charging Cable *1

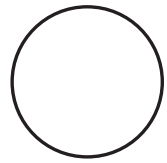


Magnet *2



Magnetic
Lanyard *2

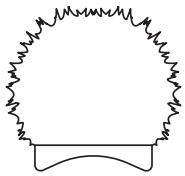

Wind Muff *2

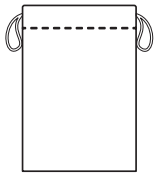

Carrying
Bag *1



User
Manual *1




Warranty
Card *1


Vimo Me (Combo):




Transmitter (TX) *2




USB Type-C
Receiver (RX) *1

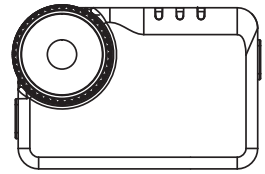


Camera
Receiver (RX) *1

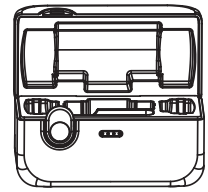


Charging
Case *1

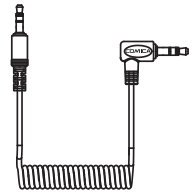

3.5mm TRS to 3.5mm
TRS Audio Cable *1

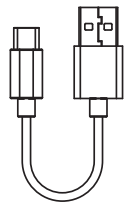


USB-C to USB-A
Charging Cable *1

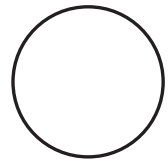


Magnet *2



Magnetic
Lanyard *2

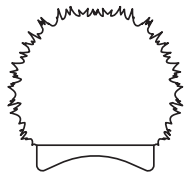

Wind Muff *2

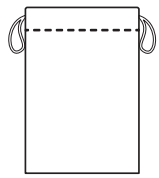

Carrying
Bag *1




User
Manual *1



Warranty
Card *1

Components and Instruction

Transmitter(TX):

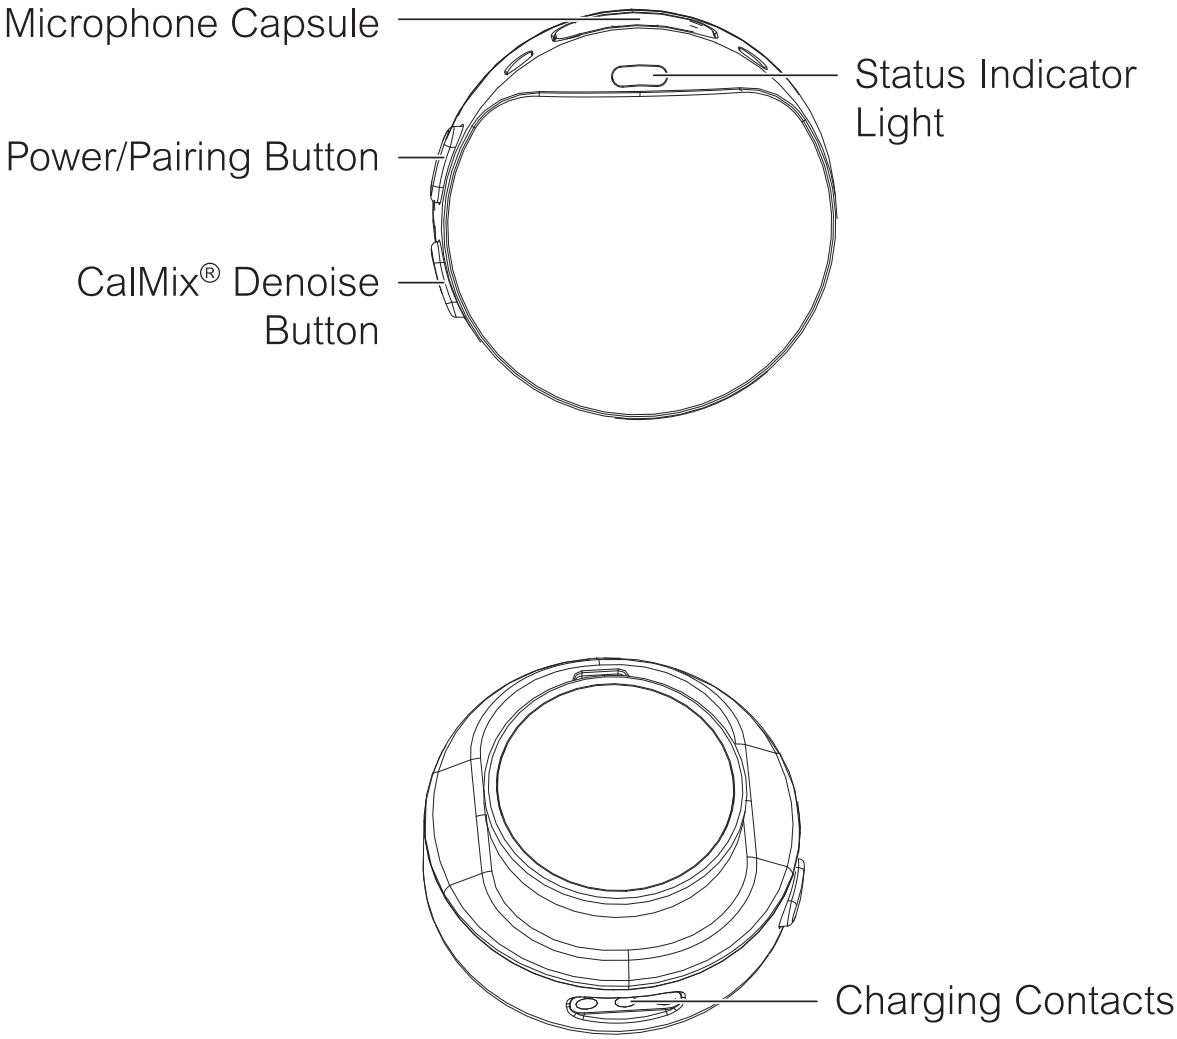


1. Microphone Capsule
2. Status Indicator Light

Unpair	Blue light blinks slowly
Pairing	Blue light blinks fast
Paired	Blue light keeps on
CalMix® Denoise	Green light keeps on
Low Battery	Red light blinks slowly
Charging	Red light keeps on when power is off
Fully Charged	Blue light keeps on when power is off

3. Power/Pairing Button
   Long press to power on/off; press three times to enter pairing state
4. CalMix® Denoise Button
   Short press to switch CalMix® denoise on/off
5. Charging Contacts

Camera Receiver (RX):

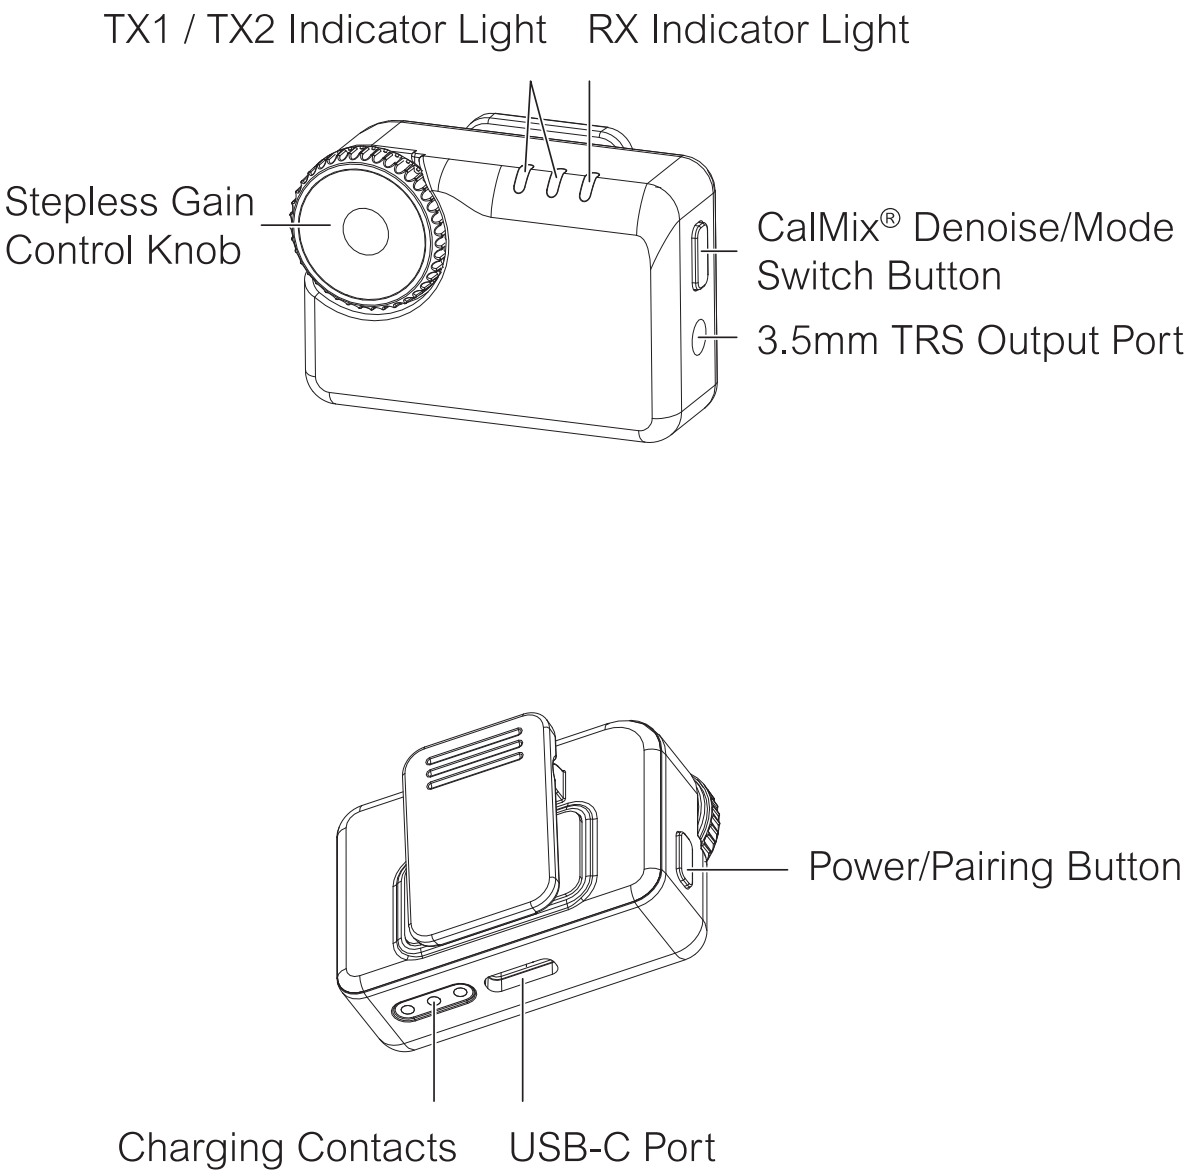

1. TX1 / TX2 Indicator Light

Unpair	Blue light blinks slowly
Pairing	Blue light blinks fast
Paired	Blue light keeps on
CalMix® Denoise	Green light keeps on

If only one transmitter is successfully paired, the other transmitter's indicator will not light up; the indicator stays solid on only after successful pairing.

2. RX Indicator Light

Power On	Blue light keeps on
Stereo Mode	Cyan light keeps on
Low Battery	Red light blinks slowly
Charging	Red light keeps on when power is off
Fully Charged	Blue light keeps on when power is off

3. Stepless Gain Control Knob

Turn clockwise to increase gain level; turn counterclockwise to decrease gain level.

4. CalMix® Denoise/Mode Switch Button

Short press to switch CalMix® denoise on/off; long press to switch mono/stereo mode

5. 3.5mm TRS Output Port

To output analog audio

6. Power/Pairing Button

Long press to power on/off; press three times to enter pairing state

7. Charging Contacts


8. USB-C Port

8.1. Connect with the power source for charging

8.2. Connect with a device for digital audio output

8.3. Connect with a computer for firmware upgrade

Type-C Receiver (RX)：

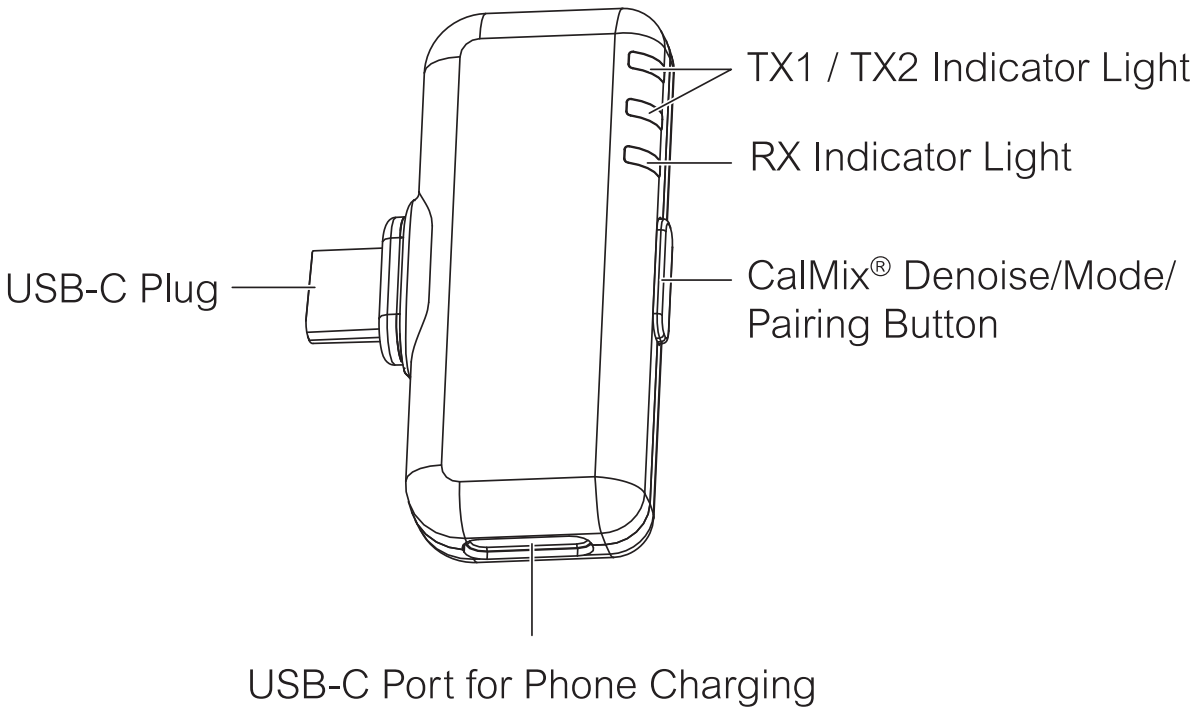

1. USB-C Plug

   Connect with a device for digital audio output; connect with a computer for firmware upgrade

2. TX1 / TX2 Indicator Light

Unpair	Blue light blinks slowly
Pairing	Blue light blinks fast
Paired	Blue light keeps on
CalMix® Denoise	Green light keeps on

3. RX Indicator Light

Mono Mode	Blue light keeps on
Stereo Mode	Cyan light keeps on

4. CalMix® Denoise/Mode/Pairing Button

   4.1. Short press to switch CalMix® denoise on/off;


   4.2. Long press to switch mono/stereo mode;

   4.3. Press three times to enter pairing state

5. USB-C Port for Phone Charging

   Connect to a power source to charge your smartphone while in use

Charging Case：

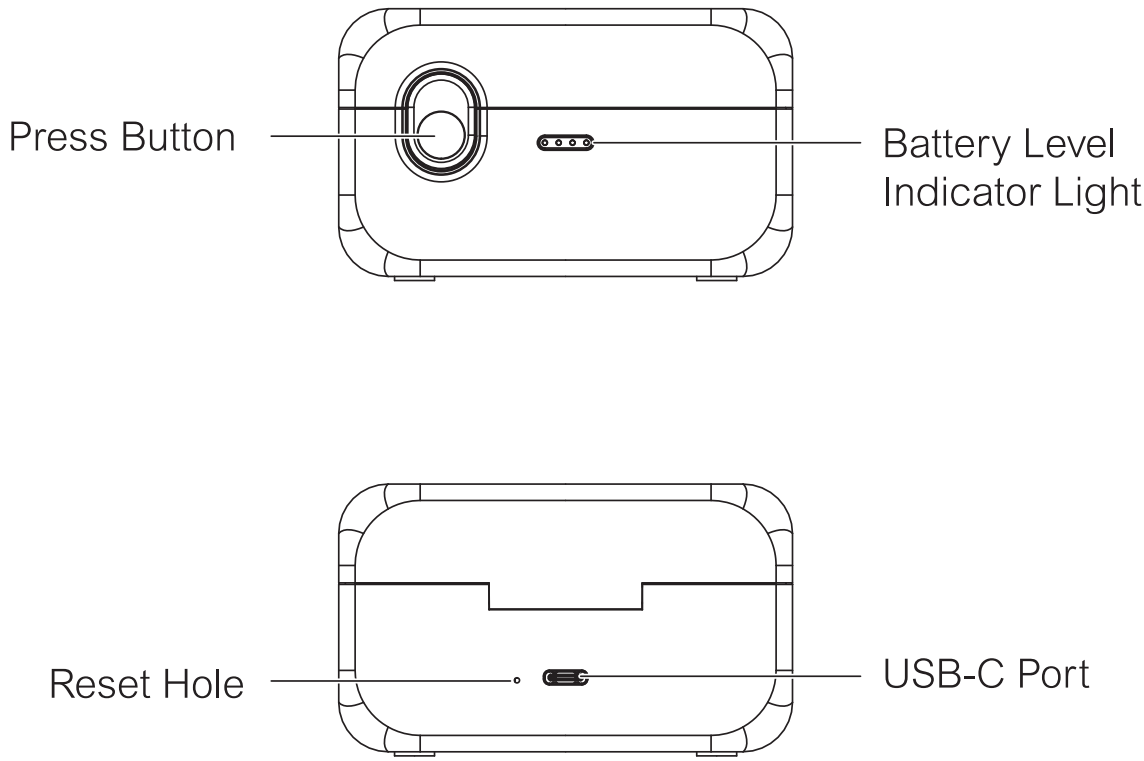

1. Press Button

   Press to open the lid of the charging case

2. Battery Level Indicator Light

   There are 4 battery lights in total, each representing 25% of the battery level

3. Reset Hole

   If there is an abnormality in charging, insert a pin into the reset hole to reset it

4. USB-C Port

   Charge the charging case

Operation Guide

Pairing


TX and RX are paired by default and ready to use when powered on. If there is an abnormality in pairing, please follow the steps to re-pair.


1. Power on the devices: long press the power button on the transmitter and camera receiver to power on; The Type-C receiver will automatically power on after being plugged into a smartphone or other devices.
2. Press the pairing buttons on the transmitter and receiver three times to enter pairing state. The indicator lights on the transmitter and receiver will stay on after successful pairing.

Usage

Transmitter (TX)

Install the transmitter on the collar via the magnet, or hang it on the neck via the magnet lanyard. When using outdoors or in windy environments, please put a wind muff on the transmitter.

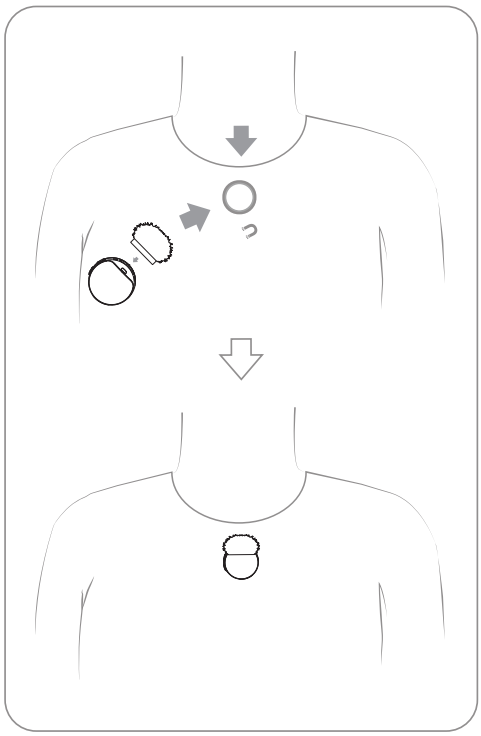


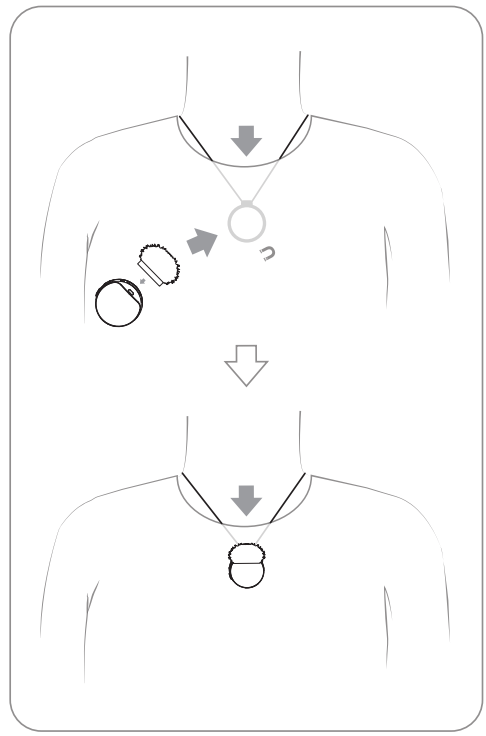

Camera Receiver (RX)

1. Digital Output


Output audio to smartphone/computer via the USB output cable.

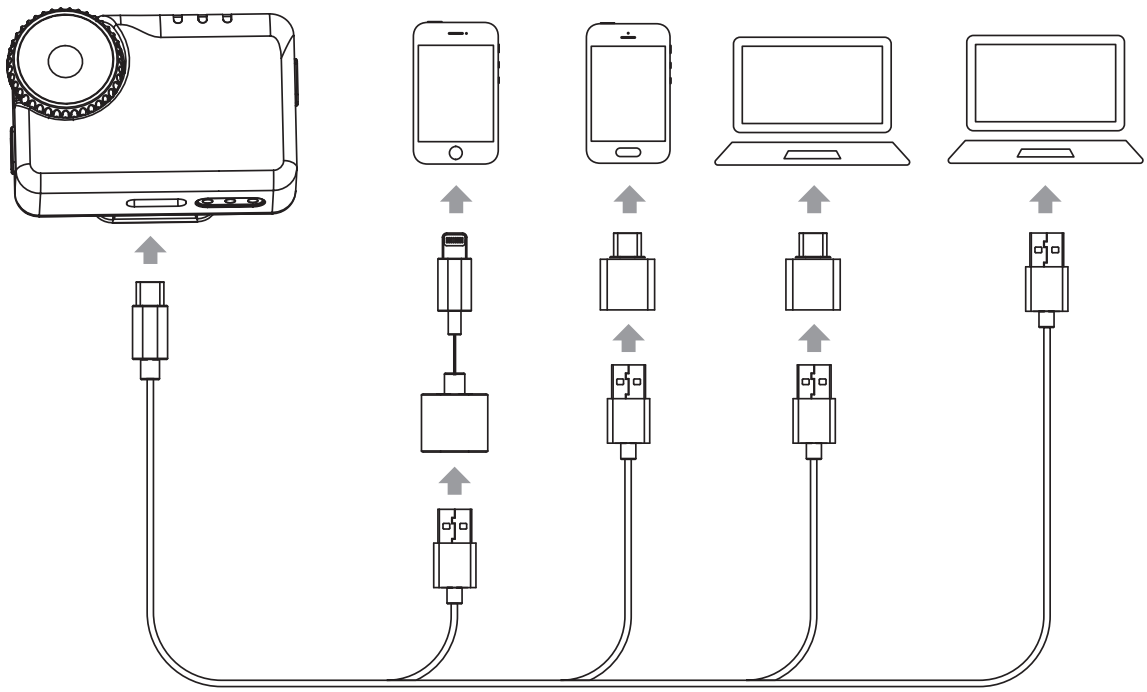

Please purchase an OTG-compatible adapter separately when using with a smartphone.

2. Analog Output

Output audio to the camera via the 3.5mm TRS-TRS audio cable. The receiver can be fixed on the camera's hot shoe mount via the back clip.

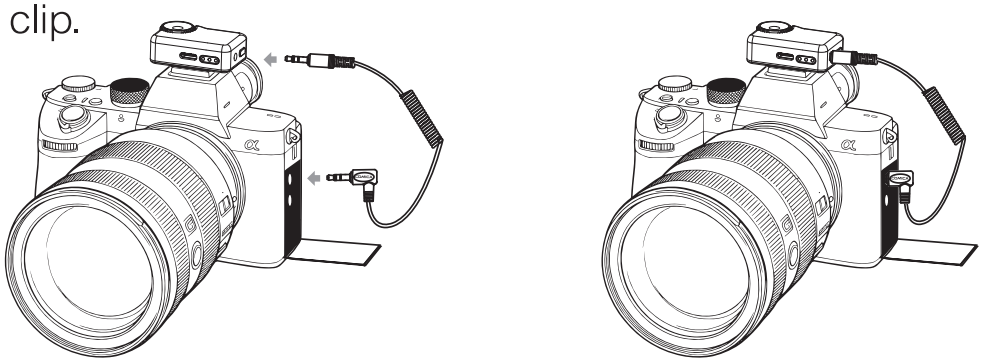


Before recording, it is recommended to lower the camera's audio input level appropriately to reduce the noise floor and distortion; then adjust the recording volume to an appropriate level via the gain control knob on the RX based on the recording environment.

Type-C Receiver (RX)


1. Digital Output

   Plug the receiver into a smartphone or other devices with a USB-C port to output digital audio.

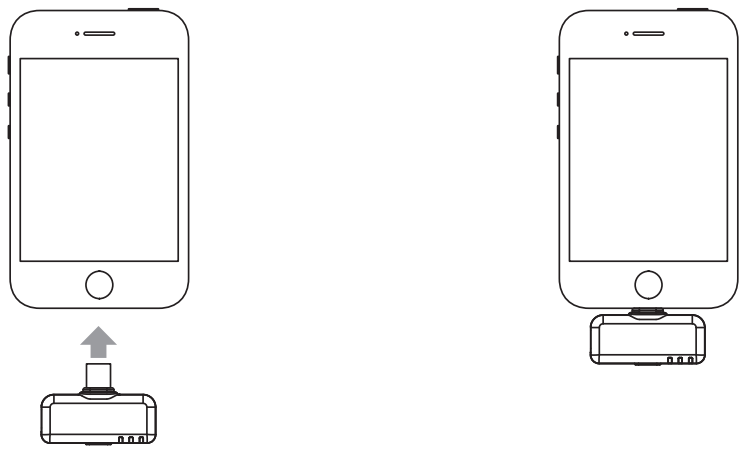

2. Smartphone Charging

   Connect the power source to the smartphone via the USB charging cable when using.

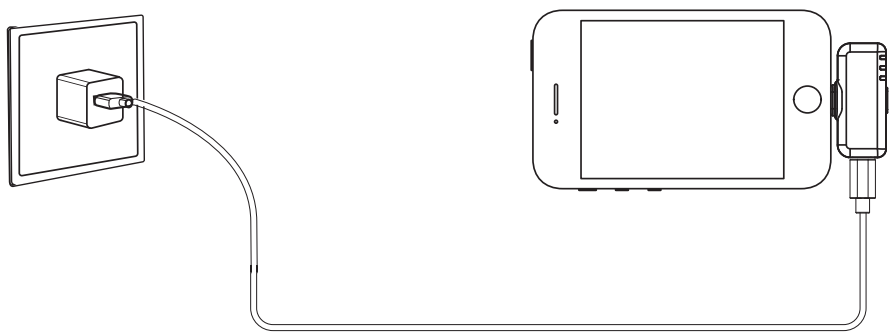

Firmware Upgrade

Download the corresponding firmware upgrade tool from the software download section of COMICA official website, then follow the steps to perform firmware upgrade.

Specification

Wireless Frequency	2402MHz ~ 2480MHz
Antenna Type	TX: FPC Antenna RX: Ceramic Antenna
Wireless Transmission Power	10dBm
Wireless Reception Sensitivity	-96dBm
Microphone Directivity	Omnidirectional
Microphone Sensitivity	-35dB±2dB
Frequency Response	80Hz ~ 20kHz
Signal/Noise	70dB SPL(A-weighted,as per IEC651)
Equivalent Noise	24dB SPL(A-weighted,as per IEC651)
Maximum SPL	115dB SPL(< 3% THD)
Dynamic Range	91dB SPL(A-weighted,as per IEC651)
Sound Delay	Typical 26ms(it will change with the enabled audio effects)
USB Audio Specification	48kHz/24bit
Battery Type	TX: Li-polymer 97mAh 3.87V RX: Li-polymer 160mAh 3.8V Charging Case: Li-polymer 1500mAh 3.7V
Charging Time	TX: 1.5 Hours RX: 2 Hours Charging Case: 2 Hours
Duration	TX: 8.5 Hours RX: 8.5 Hours Charging Case: 2 times
Net Weight	TX：9.3g (With the magnet) Camera RX：16.1g USB-C RX：4.9g Charging Case：93.8g
Dimension	TX: 26.3 x 26 x 12mm Camera RX: 42.5 x 27.6 x 19.6mm USB-C RX: 39.9 x 26.5 x 9.2mm Charging Case: 88.6 x 45.2 x 53.3mm
Working Temperature	0°C~45°C
Storage Temperature	-10°C~60°C

Instagram: Comica Audio
Facebook: Comica Audio
TikTok: Comica Audio
Twitter: Comica Audio JP
YouTube: Comica Audio
Website:comica-audio.com

COMICA is a registered trademark owned by Commlite Tech Co.,Ltd
Email: support@comica-audio.com

前言

感谢您购买科唛 Vimo Me 2.4G无线迷你领夹麦克风。

主要功能

· 2.4G双通道无线传输，超强抗干扰
· 48kHz/24bit录音，卓越音质
· CalMix®降噪技术，突出人声主体
· 数字/模拟双输出，全设备兼容
· 无级增益可调，单声道/立体声切换
· USB-C接口，支持手机直通充电
· 多功能收纳充电盒，总续航34小时
· 300米远距离传输，稳定低延迟 (空旷环境下)
· 磁吸纽扣设计，轻巧迷你

产品使用注意事项

⚠ 使用时尽量保持面对面，避免背对的情况，否则容易产生断点，此属正常现象。
⚠ 发射器与接收器断开连接30分钟后将自动关机以保护设备。
⚠ 如拾音距离较近或户外使用时，请套上麦克风防风毛，防止声音爆裂或降低风燥。
⚠ 请避免使用时掉落、碰撞或重击，否则可能造成产品故障。
⚠ 不要在雨中或潮湿的环境中使用该产品，否则可能会有短路的危险。

设备保存注意事项


⚠ 请勿自行拆卸本产品，避免机械损坏。
⚠ 请勿将本产品放置在干扰源附近，如散热器、烤箱、冰箱、空调等。
⚠ 请在干燥、阴凉的环境中保存本产品，避免热源、阳光直射或其他腐蚀性液体。

包装清单


手机套装：




发射器(TX)*2




Type-C
接收器(RX)*1

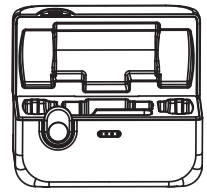

充电仓*1

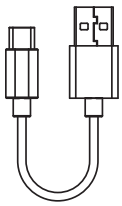


USB Type-C转
Type-A充电线*1

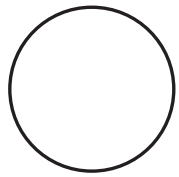


磁吸片*2



磁吸挂绳*2

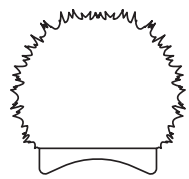

防风毛*2

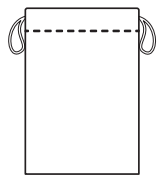

收纳袋*1



说明书*1




保修卡*1


相机套装：




发射器(TX)*2

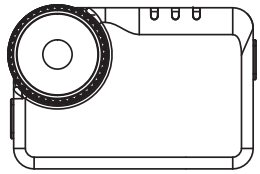


相机
接收器(RX)*1

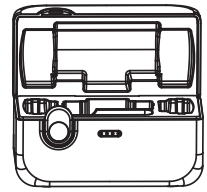


充电仓*1

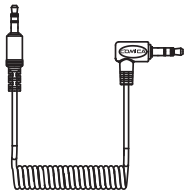

3.5mm TRS-TRS
音频线*1

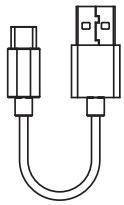


USB Type-C转
Type-A充电线*1

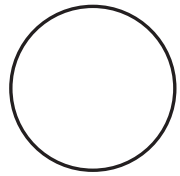


磁吸片*2



磁吸挂绳*2

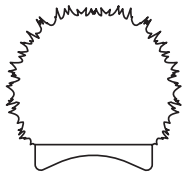

防风毛*2

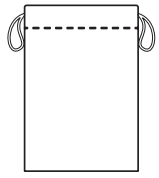

收纳袋*1



说明书*1




保修卡*1


组合套装：




发射器(TX)*2




Type-C
接收器(RX)*1

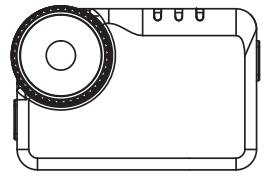


相机
接收器(RX)*1

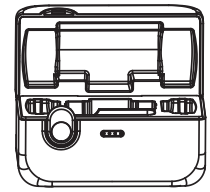


充电仓*1

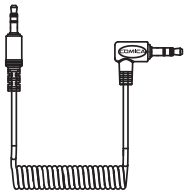

3.5mm TRS-TRS
音频线*1

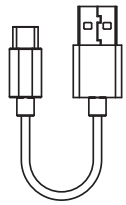


USB Type-C转
Type-A充电线*1

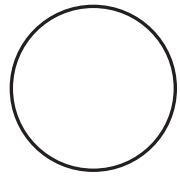


磁吸片*2



磁吸挂绳*2

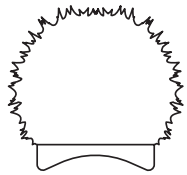

防风毛*2

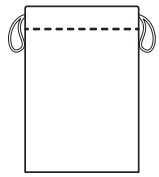

收纳袋*1




说明书*1



保修卡*1

部件介绍及说明

发射器(TX):

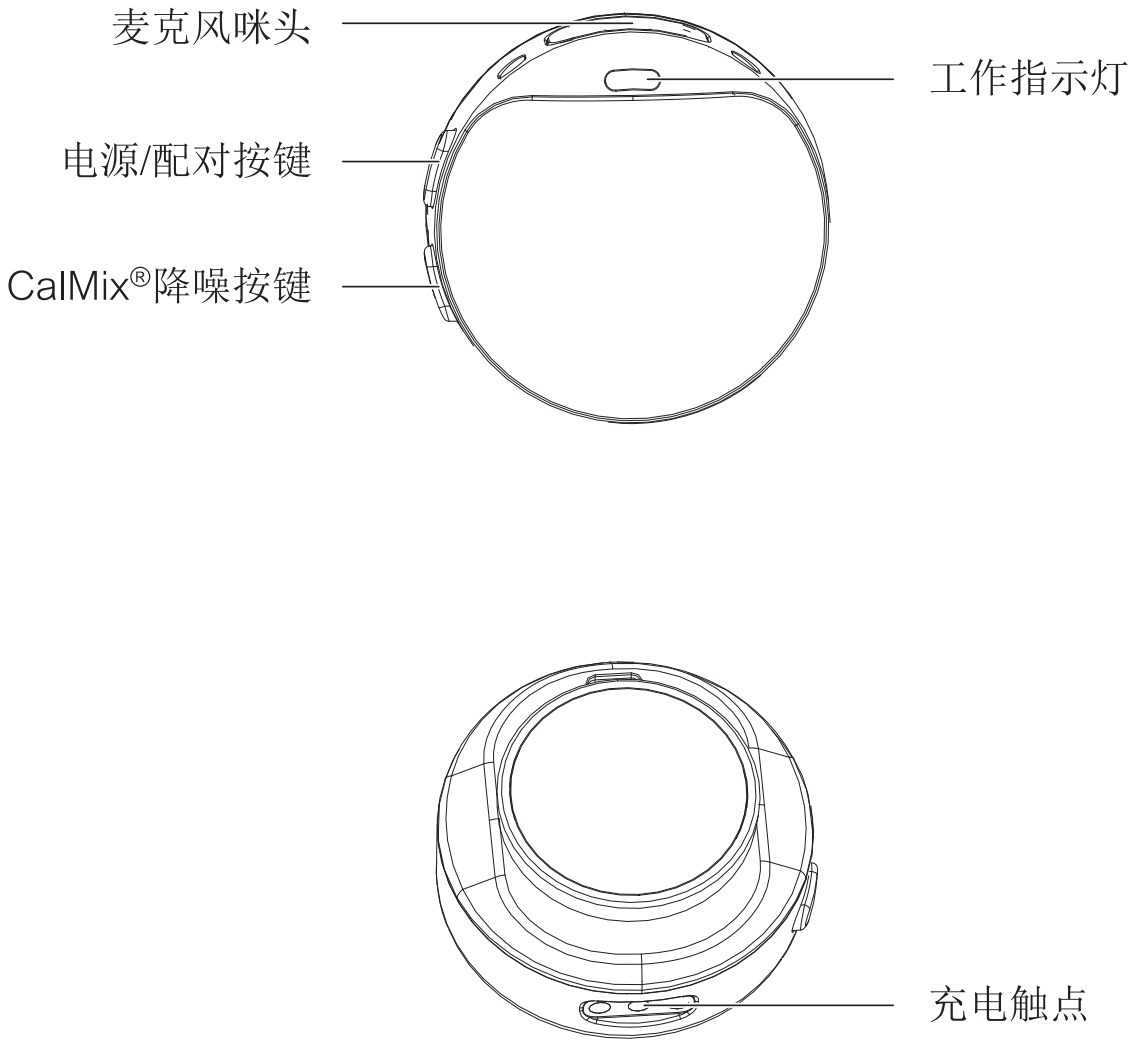

1. 麦克风咪头
2. 工作指示灯

未配对	蓝灯慢闪
配对中	蓝灯快闪
已配对	蓝灯长亮
Calmix®降噪	绿灯长亮
电量不足	红灯慢闪
充电中	关机时红灯长亮
电量充满	关机时蓝灯长亮

3. 电源/配对按键

长按开机/关机；连按三次进入配对状态


4. Calmix®降噪按键

短按开启/关闭CalMix®降噪

5. 充电触点

相机接收器(RX):


TX1 / TX2指示灯
RX指示灯
增益旋钮
Calmix®降噪/模式切换按键
3.5mm TRS输出接口

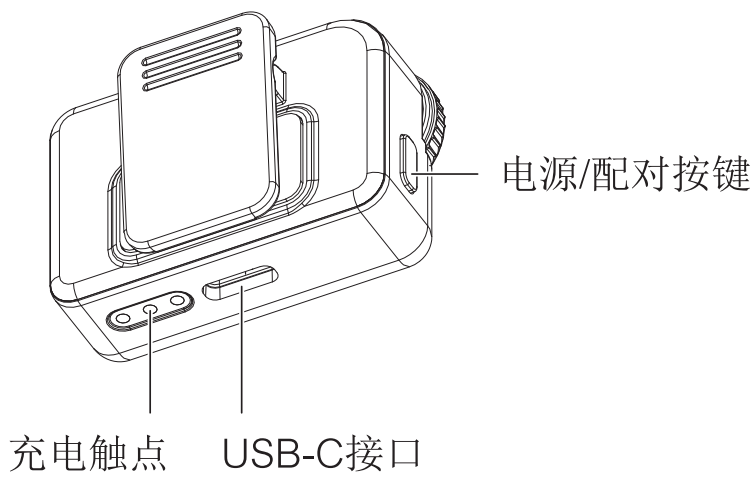
电源/配对按键
充电触点
USB-C接口

1. TX1 / TX2指示灯

未配对	蓝灯慢闪
配对中	蓝灯快闪
已配对	蓝灯长亮
Calmix®降噪	绿灯长亮

如只配对成功其中一个发射器，则另一个发射器指示灯不亮；只有配对成功，其指示灯才长亮。

2. RX指示灯

开机状态	蓝灯长亮
立体声模式	青灯长亮
电量不足	红灯慢闪
充电中	关机时红灯长亮
电量充满	关机时蓝灯长亮

3. 增益旋钮

顺时针方向调节增大增益；逆时针方向调节减小增益

4. Calmix®降噪/模式切换按键

短按开启/关闭CalMix®降噪；长按切换单声道/立体式模式

5. 3.5mm TRS输出接口

输出模拟音频

6. 电源/配对按键

长按开机/关机；连按三次进入配对状态

7. 充电触点

8. USB-C接口

8.1. 连接电源充电；

8.2. 连接设备输出数字音频；

8.3. 连接电脑进行固件升级

Type-C接收器(RX)：



1. USB-C插头

插入设备输出数字音频；连接电脑进行固件升级

2. TX1/ TX2 指示灯

未配对	蓝灯慢闪
配对中	蓝灯快闪
已配对	蓝灯长亮
Calmix®降噪	绿灯长亮

3. RX指示灯

单声道模式	蓝灯长亮
立体声模式	青灯长亮

4. Calmix®降噪/模式/配对按键

4.1. 短按开启/关闭CalMix®降噪；


4.2. 长按切换单声道/立体式模式；

4.3. 连按三次进入配对状态

5. USB-C手机充电接口

使用中可连接电源给手机充电

充电仓：

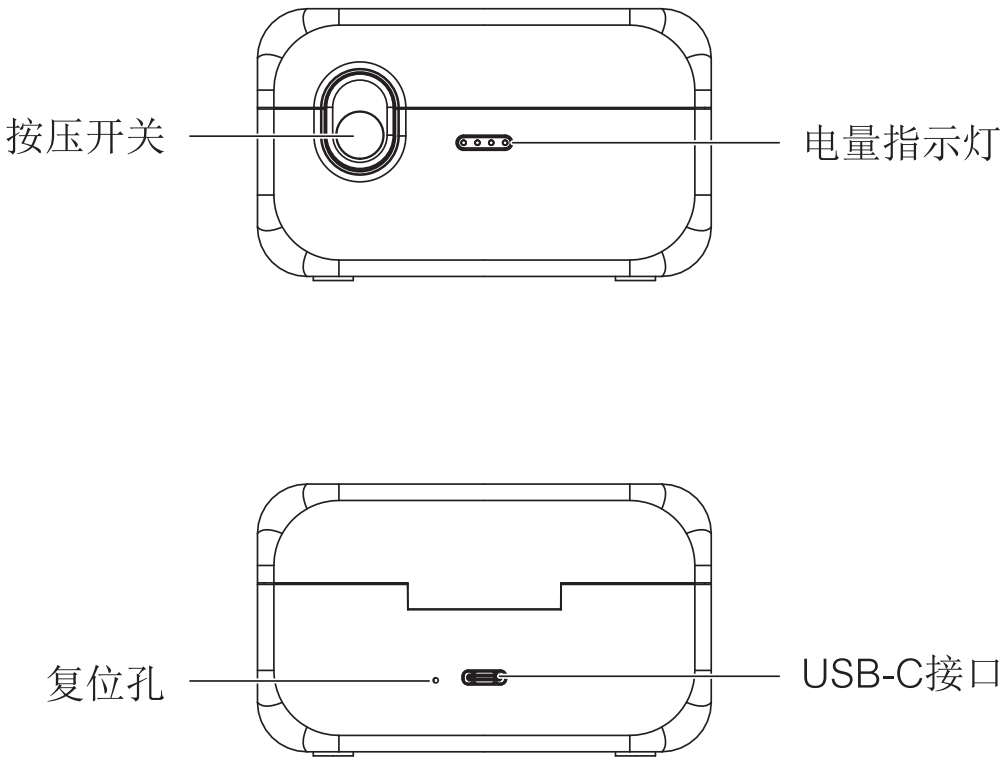

1. **按压开关**

   长按打开充电仓盖

2. **电量指示灯**

   总共四格电量，每格代表25%电量

3. **复位孔**

   如充电有异常，将卡针插入复位孔即可复位

4. **USB-C接口**

   给充电仓供电

操作指南

配对

设备出厂时已默认配对，开机后即可使用。如配对出现异常，请按以下操作重新配对。


1. 将设备开机：发射器与相机接收器长按电源键开机；Type-C接收器插入手机等设备后即自动开机。


2. 连按三次发射器与接收器的配对按键进入配对状态，配对成功后发射器与接收器的指示灯均长亮。

使用

发射器(TX)

使用磁吸片将发射器别在衣领上使用，或通过磁吸挂绳挂在脖子上使用。处于户外或有风的环境中时，请套上麦克风防风毛使用。

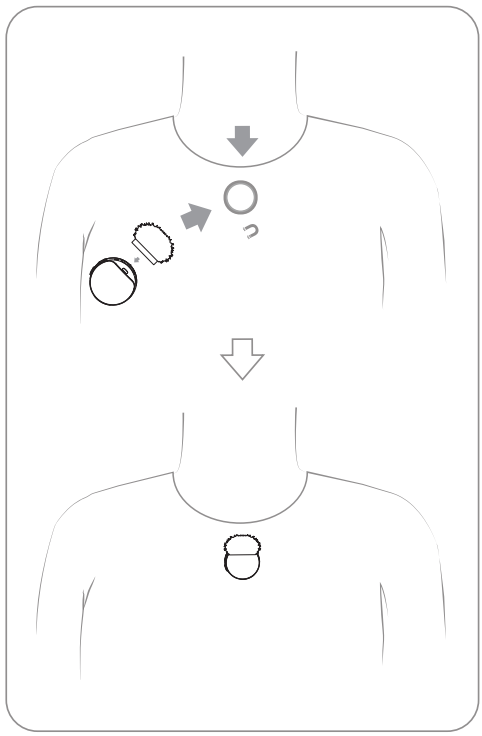


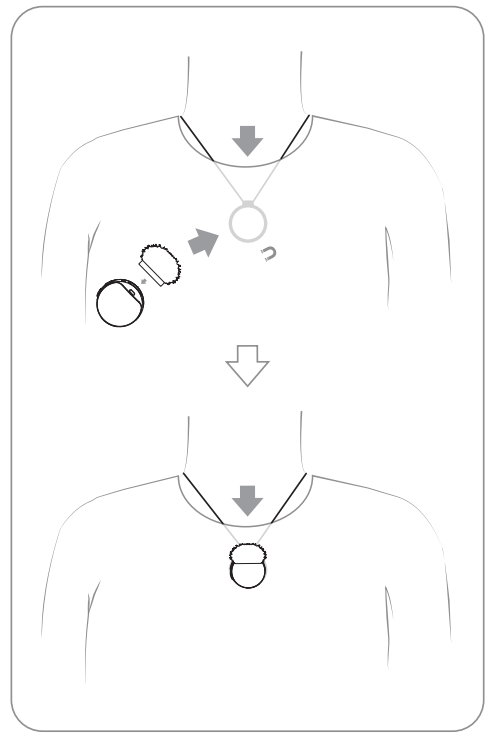

相机接收器(RX)

1. 数字输出


通过USB输出连接线输出音频至手机/电脑。

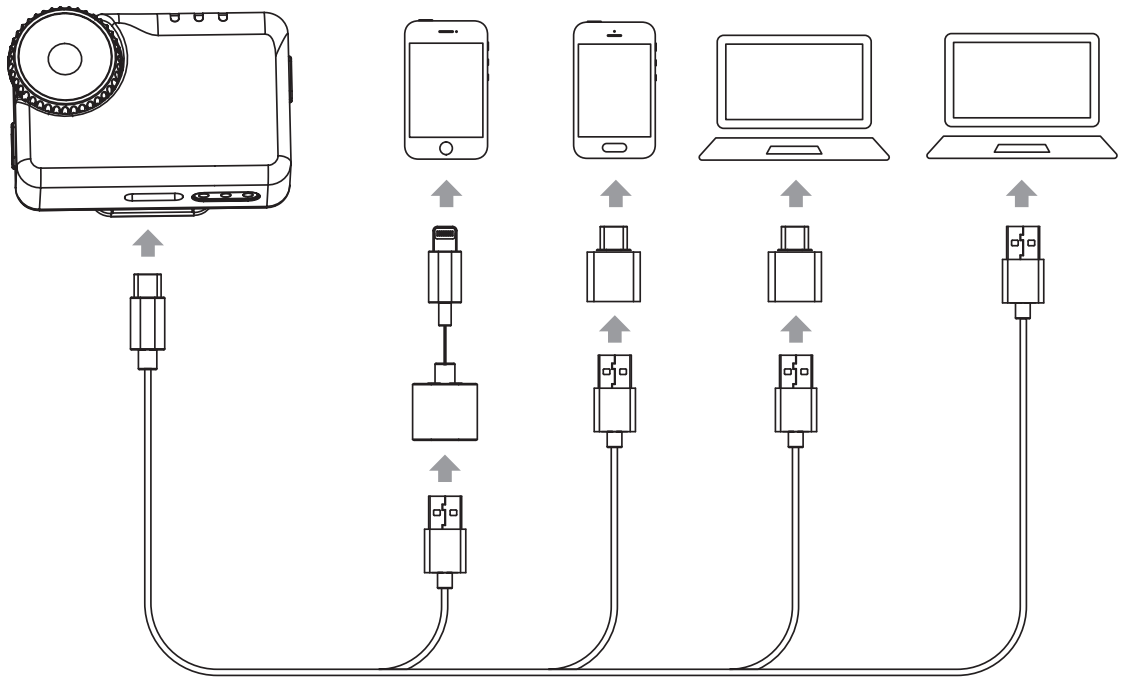

搭配手机使用时，请自行购买支持OTG功能的转接头

2. 模拟输出

通过3.5mm TRS-TRS音频线输出音频至相机，可通过背夹将接收器固定在相机的热靴座。

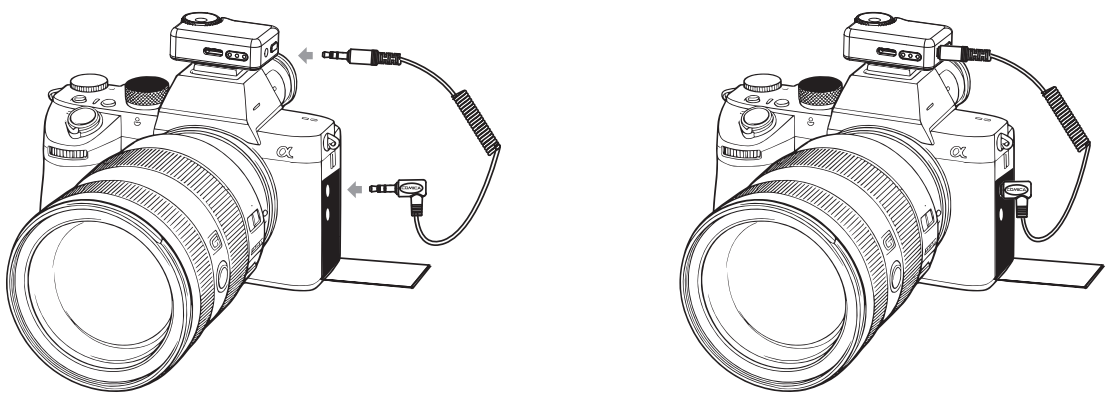


在开始录制前，为获得更好的录音效果，建议适当调低相机的录音电平，以减少底噪和失真；随后请根据实际拍摄环境和声音大小，通过接收器RX上的增益调节功能，将录音音量调整至合适的水平。

Type-C接收器（RX）


1. 数字输出

将接收器插入USB-C的手机等设备输出数字音频。

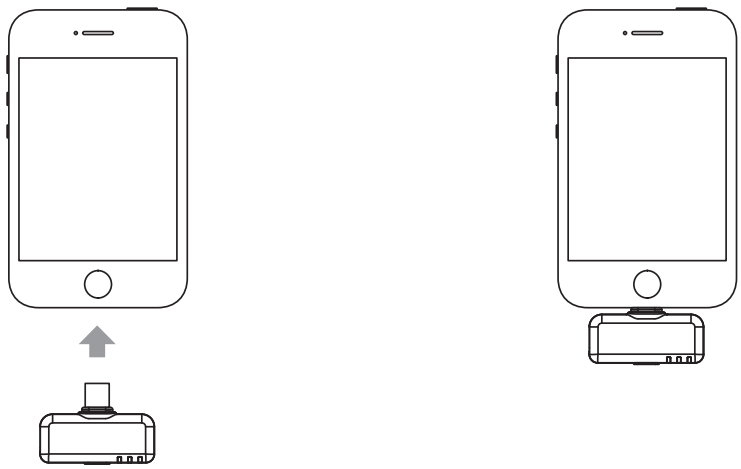

2. 手机充电

在使用过程中，可通过USB充电连接线连接电源给手机充电。

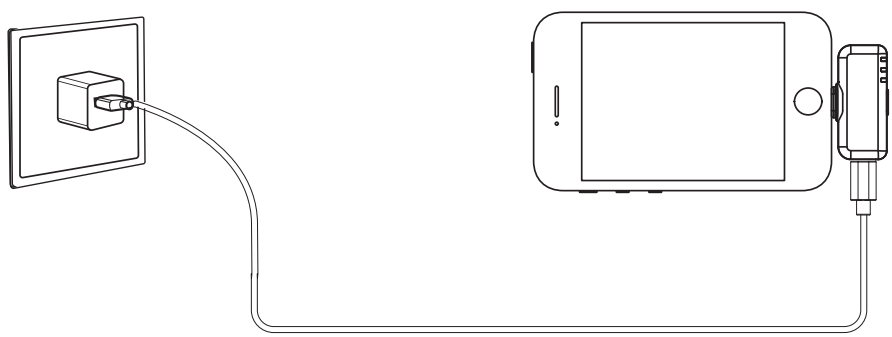

固件升级

在COMICA官网软件下载区下载对应固件升级工具，按操作提示进行固件升级即可。

规格参数

无线频率	2402MHz-2480MHz
天线类型	TX: FPC天线　　RX: 陶瓷天线
无线发射功率	10dBm
无线接收灵敏度	-96dBm
麦克风指向性	全指向
麦克风灵敏度	-35dB+2dB
频率响应	80Hz~20kHz
信噪比	70dB SPL(A-weighted,as per IEC651)
等效噪声	24dB SPL(A-weighted,as per IEC651)
最大声压级	115dB SPL(< 3% THD)
动态范围	91dB SPL(A-weighted,as per EC651)
声音延迟	典型26ms(根据开启的音频效果有所变化)
USB音频规格	48kHz/24bit
电池类型	TX: 锂聚合物 97mAh 3.87V RX: 锂聚合物 160mAh 3.8V 充电盒：锂聚合物 1500mAh 3.7V
充电时间	TX：1.5小时　　RX：2小时 充电盒：2小时
续航时间	TX: 8.5小时　　RX: 8.5小时 充电盒: 2次
净重	TX：9.3g (带磁铁) 相机 RX：16.1g USB-C RX：4.9g　　充电盒：93.8g
尺寸	TX: 26.3 x 26 x 12mm 相机 RX: 42.5 x 27.6 x 19.6mm USB-C RX: 39.9 x 26.5 x 9.2mm 充电盒: 88.6 x 45.2 x 53.3mm
工作温度	0°C~45°C
存储温度	-10°C~60°C

扫二维码关注
科唛官方公众号

COMICA科唛

COMICA科唛

COMICA科唛

COMICA科唛

邮箱：support@comica-audio.com
电话：400-8303-981
网址：comica-audio.com
版权及科唛商标归咔莱科技有限公司所有

はじめに

Comica Vimo Me 2.4G ワイヤレスミニラベリアマイクをお買い上げいただき、誠にありがとうございます。

主な特徴

- 2.4Gデュアルチャンネルワイヤレス伝送、優れた耐干渉性能
- 48kHz/24bitハイレゾ録音で卓越した音質
- CalMix®ノイズリダクションにより、ボーカルをクリアに
- デジタル・アナログ両出力に対応し、幅広い機器と互換性
- 無段階ゲイン調整、モノラル/ステレオ切替可能
- 使用中もスマートフォンへ給電できるパススルー充電ポート搭載
- 多機能充電ケース付属、総再生時間34時間
- 最大300mの安定伝送（見通しの良い場所）
- マグネット装着でコンパクト＆ポータブル

製品使用上の注意

⚠ 使用中は送信機を受信機に向けて正面でご使用ください。背を向けると音声が途切れる場合がありますが、これは仕様上の正常な現象です。
⚠ 送信機と受信機の接続が30分以上切断された場合、機器保護のため自動的に電源がオフになります。
⚠ 音源との距離が近い場合や屋外で録音する際は、送信機にウインドマフを装着してポップノイズや風切り音を軽減してください。
⚠ 落下、衝突、強い衝撃を避けてください。故障の原因となります。
⚠ 雨天や湿気の多い場所では使用しないでください。ショートや故障の恐れがあります。

保管上の注意


⚠ 機械的損傷を防ぐため、本製品を分解しないでください。
⚠ 本製品をラジエーター、電子レンジ、冷蔵庫、エアコンなどの熱源の近くや内部に置かないでください。
⚠ 本製品は乾燥した涼しい場所に保管し、熱、直射日光、腐食性液体を避けてください。

同梱リスト


Vimo Me（Phone）:




送信機(TX)*2




USB Type-C
受信機(RX)*1

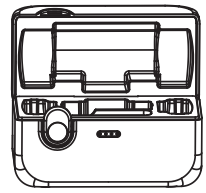

充電ケース*1

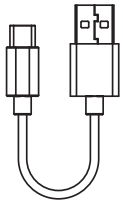


USB-C - USB-A
充電ケーブル*1

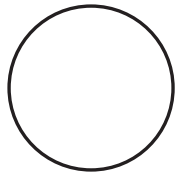


マグネット*2



マグネット
ネックストラップ*2

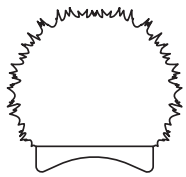

ウインドマフ*2

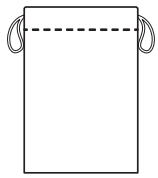

キャリングバッグ*1



取扱説明書*1




保証書*1


Vimo Me（Camera）:




送信機(TX)*2

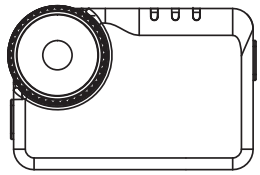


カメラ用受信機(RX)*1

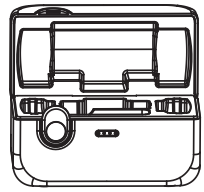


充電ケース*1

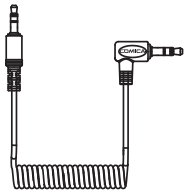

3.5mm TRS - 3.5mm TRS
オーディオケーブル*1

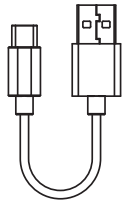


USB-C - USB-A
充電ケーブル*1

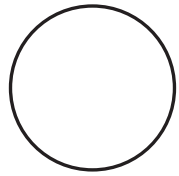


マグネット*2



マグネット
ネックストラップ*2

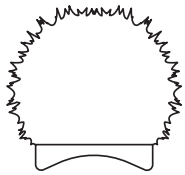

ウインドマフ*2

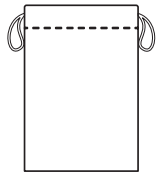

キャリングバッグ*1



取扱説明書*1




保証書*1


Vimo Me (Combo):




送信機(TX)*2




USB Type-C
受信機(RX)*1

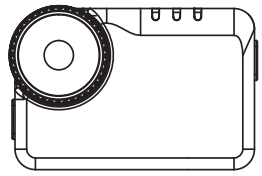


カメラ用受信機(RX)*1

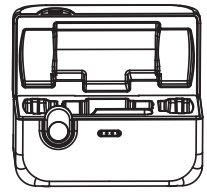


充電ケース*1

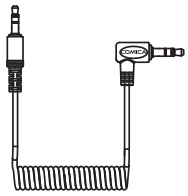

3.5mm TRS - 3.5mm TRS
オーディオケーブル*1

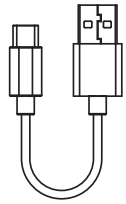


USB-C - USB-A
充電ケーブル*1

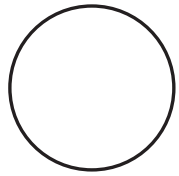


マグネット*2



マグネット
ネックストラップ*2

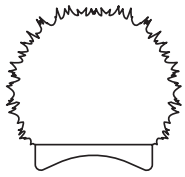

ウインドマフ*2

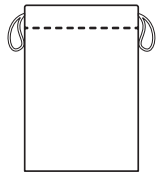

キャリングバッグ*1




取扱説明書*1




保証書*1

各部名称と説明

送信機(TX):

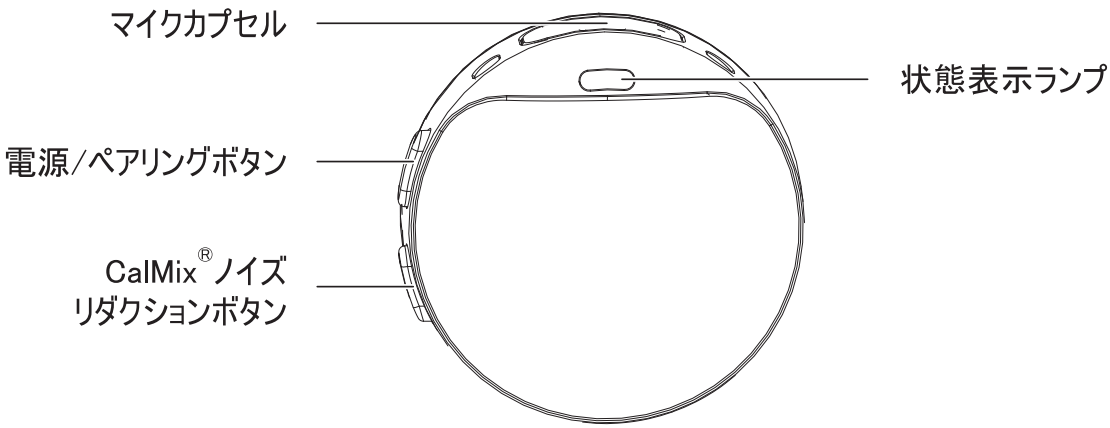

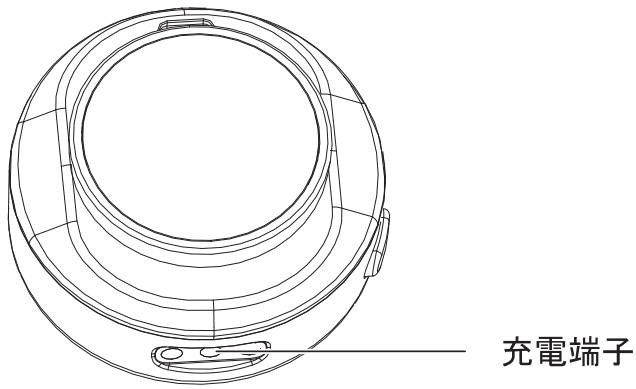

1. マイクカプセル
2. 状態表示ランプ

未ペアリング	青色ゆっくり点滅
ペアリング中	青色高速点滅
ペアリング済み	青色点灯
Calmix®ノイズリダクションON	緑色点灯
バッテリー低下	赤色ゆっくり点滅
充電中（電源オフ時）	赤色点灯
充電完了（電源オフ時）	青色点灯

3. 電源/ペアリングボタン


長押しで電源ON/OFF、3回押しでペアリングモードに入ります。


4. Calmix®ノイズリダクションボタン

短押しでON/OFFを切り替えます。

5. 充電端子

カメラ用受信機(RX):

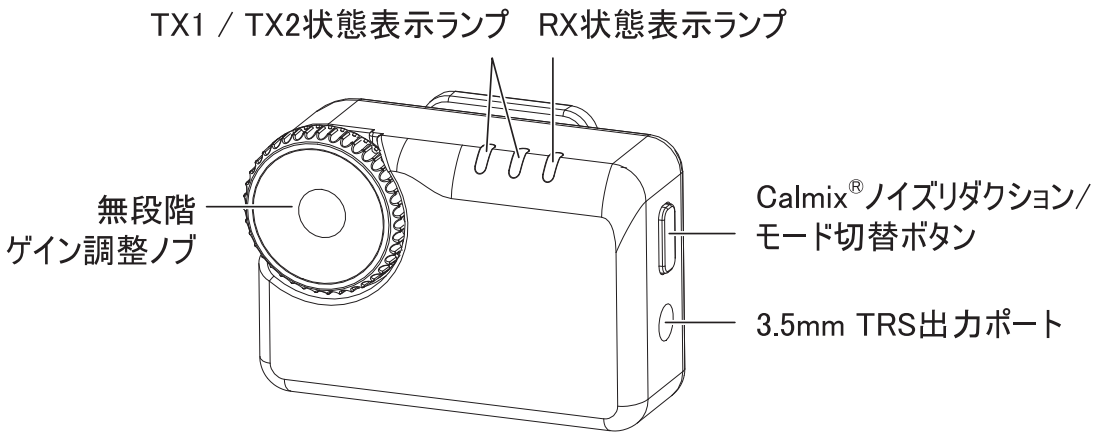
TX1 / TX2状態表示ランプ
RX状態表示ランプ
無段階
ゲイン調整ノブ
Calmix® ノイズリダクション/
モード切替ボタン
3.5mm TRS出力ポート

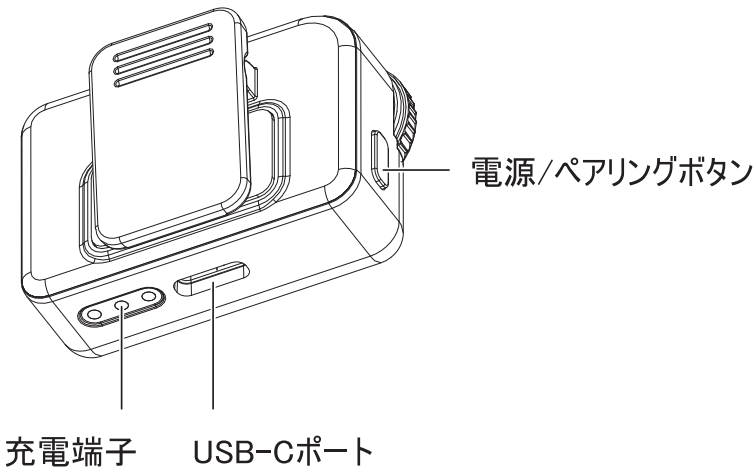
電源/ペアリングボタン
充電端子
USB-Cポート

1. TX1 / TX2状態表示ランプ

未ペアリング	青色ゆっくり点滅
ペアリング中	青色高速点滅
ペアリング済み	青色点灯
Calmix®ノイズリダクションON	緑色点灯

送信機のうち1台のみペアリング済ました場合、もう1台の状態表示ランプは点灯しません。ペアリング済む後に点灯します。

2. RX状態表示ランプ

電源ON	水色（シアン）点灯
ステレオモード	水色（シアン）点灯
バッテリー低下	赤色ゆっくり点滅
充電中（電源オフ時）	赤色点灯
充電完了（電源オフ時）	青色点灯

3. 無段階ゲイン調整ノブ

右回しでゲインアップ、左回しでダウン。

4. Calmix®/モード切替ボタン

短押しでノイズリダクションON/OFF、長押しでモノラル/ステレオ切替。

5. 3.5mm TRS出力ポート

アナログ音声出力。

6. 電源/ペアリングボタン

長押しで電源ON/OFF、3回押しでペアリングモード。

7. 充電端子


8. USB-Cポート:

8.1. 電源接続で充電

8.2. 機器接続でデジタル音声出力

8.3. パソコン接続でファームウェアアップグレード

USB Type-C受信機(RX):

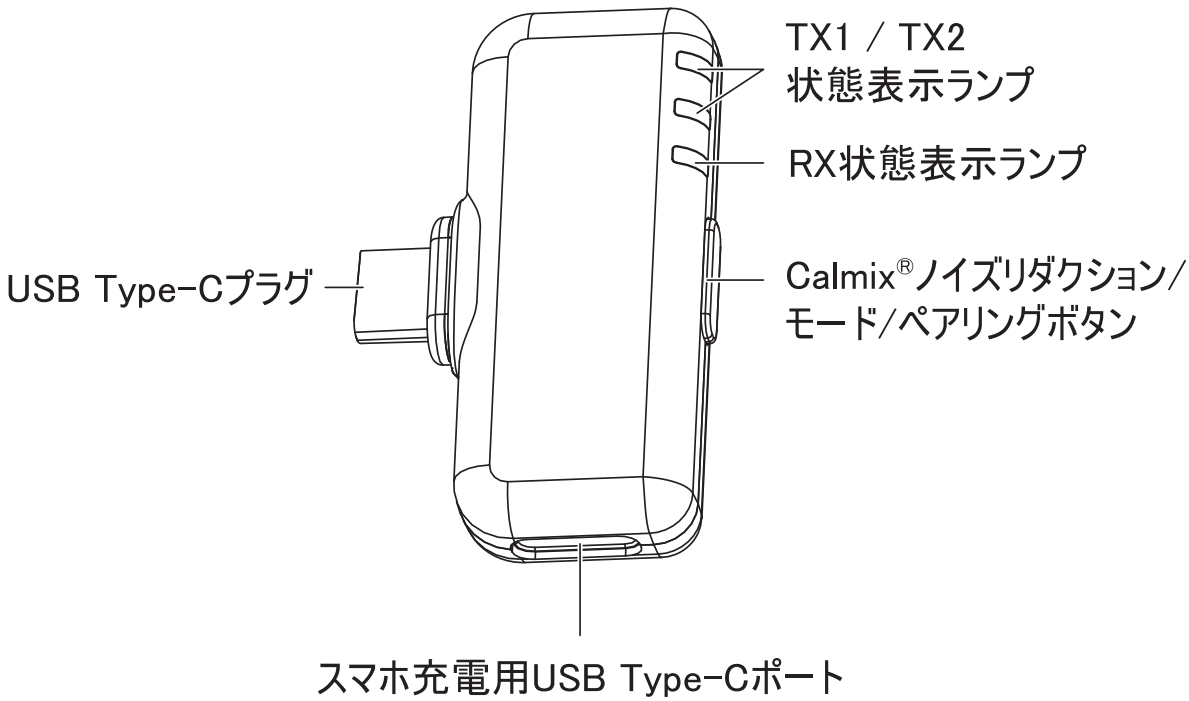

1. USB-Cプラグ

機器に接続してデジタル音声出力、パソコンに接続してファームウェアアップグレードが可能です。

2. TX1/TX2 状態表示ランプ

未ペアリング	青色ゆっくり点滅
ペアリング中	青色高速点滅
ペアリング済み	青色点灯
Calmix®ノイズリダクションON	緑色点灯

3. RX状態表示ランプ

モノラルモード	青色点灯
ステレオモード	水色（シアン）点灯

4. Calmix®ノイズリダクション/モード/ペアリングボタン

4.1. 短押し：ノイズリダクションON/OFF


4.2. 長押し：モノラル/ステレオ切替

4.3. 三回押し：ペアリングモードに入る

5. スマホ充電用USB-Cポート

使用中に電源を接続するとスマホを充電できます。

充電ケース:

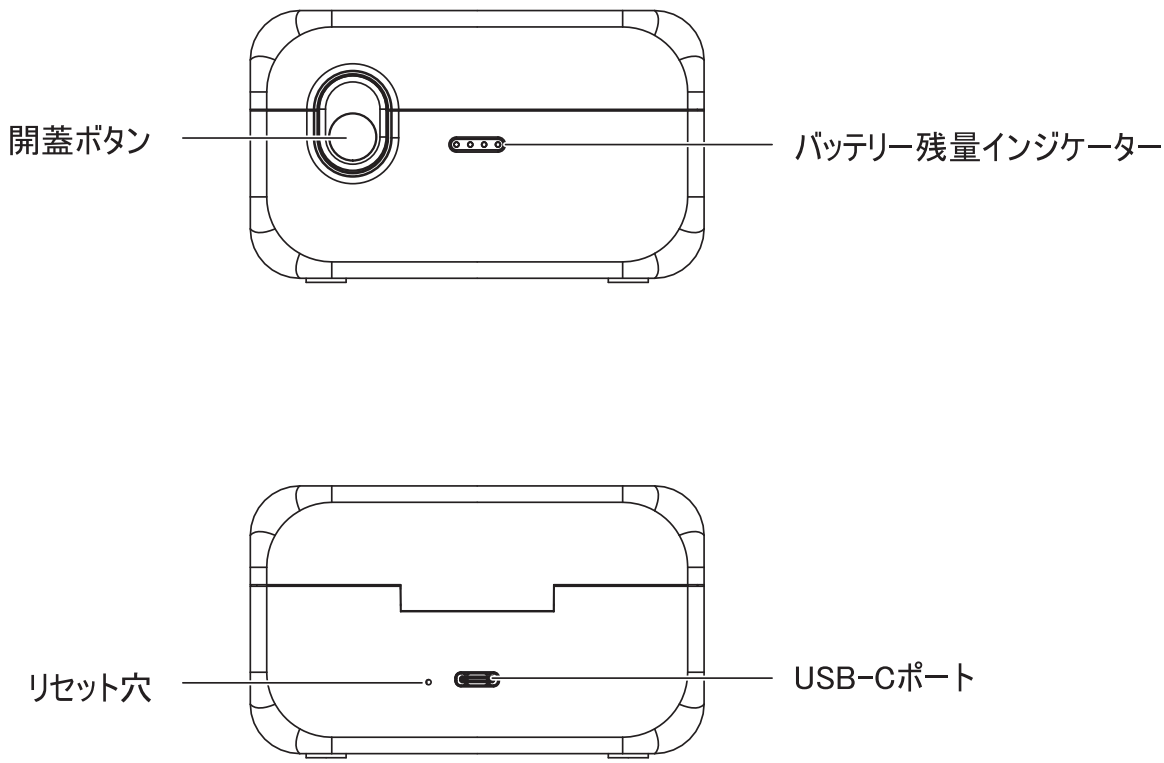

1. **開蓋ボタン**
   ボタンを押すと、充電ケースの蓋が開きます。
2. **バッテリー残量インジケーター**
   4個のランプ、各25%を表示します。
3. **リセット穴**
   充電に異常がある場合は、ピンなどをリセット穴に差し込んでリセット
   してください。
4. **USB-Cポート**
   充電ケース本体の充電に使用します。

操作ガイド


ペアリング


本製品は出荷時にペアリング済みのため、電源を入れるだけでご使用いただけます。
ペアリングに異常がある場合は、以下の手順で再ペアリングを行ってください。
1. 電源を入れます。
送信機とカメラ用受信機：各々の電源ボタンを長押し。
USB Type-C受信機：スマホなどの機器に挿すと自動で電源が入ります。
2. 送信機と受信機のペアリングボタンをそれぞれ3回押し、ペアリングモードにします。
ペアリングが成功すると、送信機と受信機のインジケーターが点灯します。

使用方法

送信機(TX)

マグネットを使って襟元に取り付けるか、マグネットネックストラップで首に掛けて使用します。
屋外や風の強い場所では、ウインドマフを装着してください。

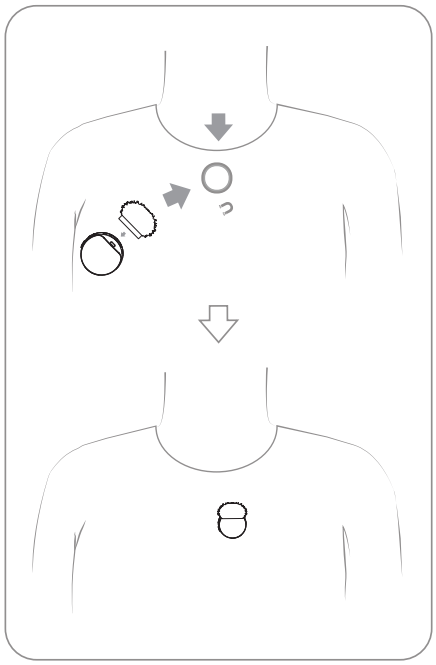


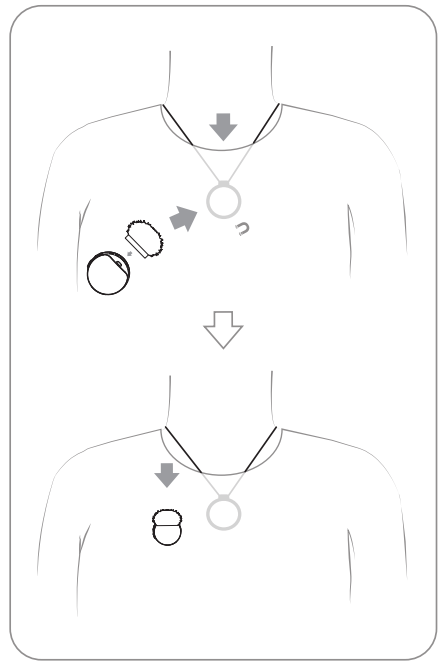

カメラ用受信機(RX)

1. デジタル出力


USB出力ケーブルでスマホやパソコンに音声を出力します。

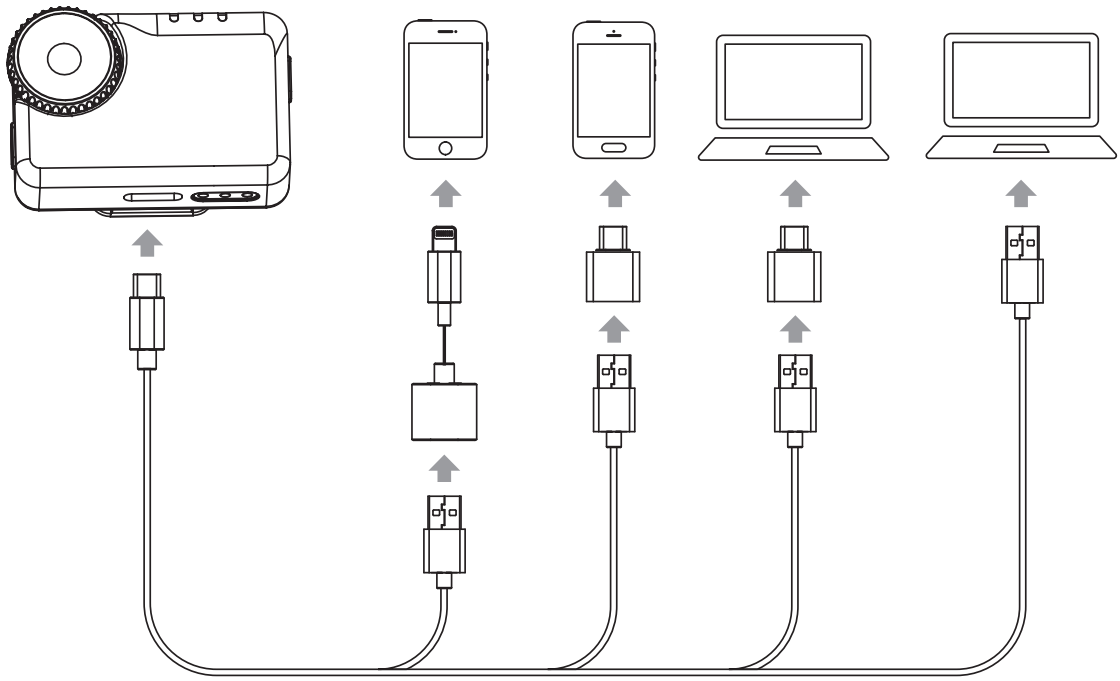

スマホで使用する場合は、OTG対応アダプターを別途ご用意ください。

2. アナログ出力

3.5mm TRS-TRSオーディオケーブルでカメラに音声を出力します。受信機は背面クリップでカメラのホットシューに固定できます。

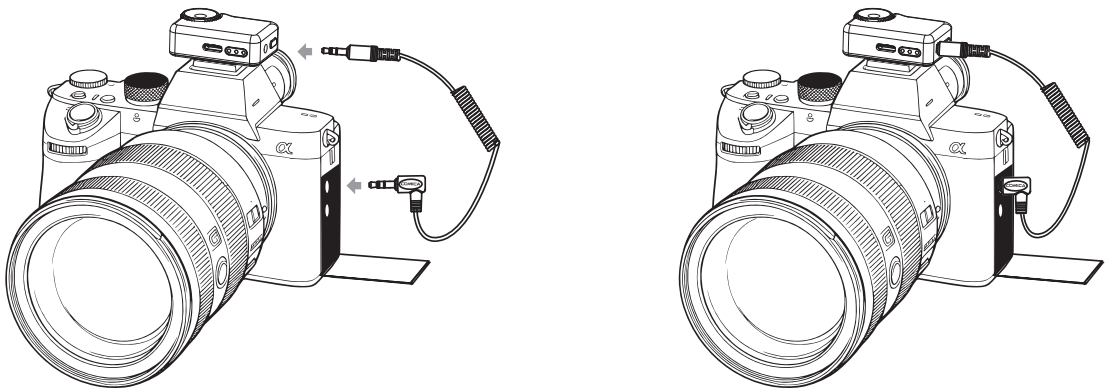


録音前のご注意：カメラの音声入力レベルを適切に下げてノイズフロアと歪みを低減した後、受信機のゲイン調整ノブで録音環境に合わせて音量を調整してください。

USB Type-C受信機(RX)


1. デジタル出力

受信機をUSB Type-Cポート搭載のスマホやその他の機器に差し込むだけでデジタル音声が出力されます。

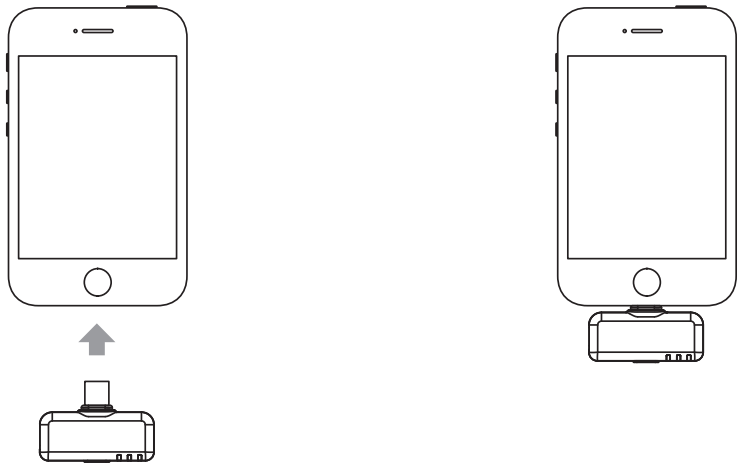

2. スマホ充電

使用中にUSB充電ケーブルで電源とスマホを接続すると、スマホを充電できます。

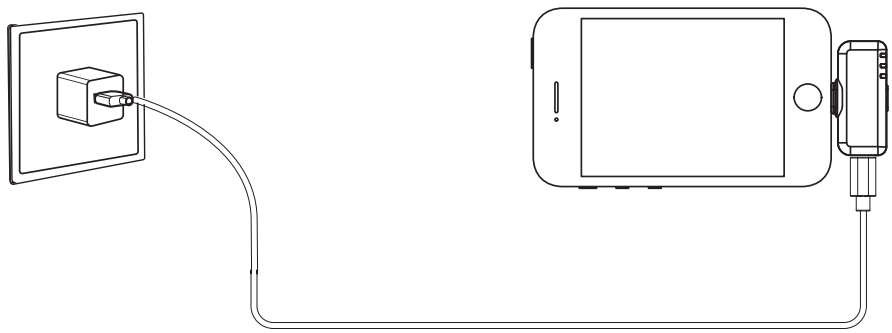

ファームウェアアップグレード

COMICA公式ウェブサイトの「ソフトウェアダウンロード」から対応するアップグレードツールをダウンロードし、手順に従って実行してください。

仕様

無線周波数	2402MHz-2480MHz
アンテナタイプ	TX: FPCンテナ　　RX: セラミックアンテナ
無線送信出力	10dBm
無線受信感度	-96dBm
マイク指向性	無指向性
マイク感度	-35dB+2dB
周波数特性	80Hz~20kHz
SN比	70dB SPL(A特性、IEC651準拠)
等価ノイズ	24dB SPL(A特性、IEC651準拠)
最大SPL	115dB SPL(< 3% THD)
ダイナミックレンジ	91dB SPL(A-weighted,as per EC651)
音声遅延	標準26ms(有効エフェクトにより変動)
USBオーディオ仕様	48kHz/24bit
バッテリータイプ	TX: リチウムポリマー 97mAh 3.87V RX(カメラ用):リチウムポリマー 160mAh 3.8V 充電ケース:リチウムポリマー 1500mAh 3.7V
充電時間	TX:約1.5時間　　RX(カメラ用):約2時間 充電ケース:約2時間
連続使用時間	TX: 約8.5時間　　RX(カメラ用):約8.5時間 充電ケース:約2回分(フル充電可)
重量	TX:約9.3g(マグネット含む) カメラ用RX:約16.1g USB Type-C RX:約4.9g　　充電ケース:約93.8g
寸法	TX:約26.3×26×12mm カメラ用RX:約42.5×27.6×19.6mm USB Type-C RX:約39.9×26.5×9.2mm 充電ケース:約127.4×45.2×52.8mm
使用温度	0℃ ~ 45℃
保管温度	-10℃ ~ 60℃

Instagram: Comica Audio
Facebook: Comica Audio
TikTok: Comica Audio
Twitter: Comica Audio JP
YouTube: Comica Audio
ウェブサイト:comica-audio.com

「COMICA」は Commlite Tech Co., Ltd. の登録商標であり、著作権および
商標権は同社に帰属します。